

The Key-Chain Remote:



Programming Additional Key-Chain Remotes:

The following steps should be performed to program additional key-chain remotes. Prior to programming, verify that the circuit board is connected to the battery source. When a new key-chain remote is programmed, all previous remotes that were programmed will be erased and will require reprogramming.

1. Locate the program button on the circuit board (Page 8). Depress and hold (approx. 3 seconds) until the red "active" LED illuminates, and then release the button.
2. Depress any button on the key-chain remote and verify that the "active" LED blinks.
3. Repeat step 2 for each additional key-chain remote.
4. After (5) seconds of no button being depressed on the key-chain remote the system will return to normal operation. The "active" LED will blink rapidly, then turn off. The system is now in the normal mode of operation. Verify that each key-chain remote has been successfully programmed.