



Installing a Custom-Fit 2019 Boston Whaler Montauk 17 Console Cover

Supplies You Will Need:

- Drill
- 9/64" Drill Bit
- Phillips Head Screwdriver
- Pencil
- Optional: Silicone

Package Includes:

- (1) - Console Cover
- (1) - 3/8" Screw Stud
- (3) - Stayput™ Attach Knobs
- (3) - 10x1" Screws



Tag on front-side (Figure 1B)



Cover designed for storage only.




Tag-side - Front (Figure 1A)

Steps to Install the Console Cover:

1. Locate the I.D. tag on the inside of the cover (Figure 1B). Center the cover on the console with the tag side to the front of the console (Figure 1A).
2. Using a pencil, carefully mark the location for each screw stud on the starboard side of the console as it corresponds with the snap on the cover (Figure 2).
3. Use the 9/64" drill bit to drill a pilot hole for the screw stud. **When drilling into fiberglass, hollow out the pilot hole to avoid cracking fiberglass when installing the screw stud.** If desired, a drop of silicone may be used to seal the screw hole. Install the screw stud with the Phillips head screwdriver and snap the cover to the side of the console.
4. Pull or drape cover over console so that it is form fitting (Figure 1A). Fully stretch the attached Stayput™ ultimate shock cord and relax it 2/3 of the way. Using a pencil, mark the location for each of the 3 Stayput™ attach knobs (Figure 3). **NOTE:** You will need to locate the knobs so that the tension of the shock cord creates a secure fit. Use the 9/64" drill bit to drill a pilot hole for the Stayput™ attach knobs. **When drilling into fiberglass, hollow out the pilot hole to avoid cracking fiberglass when installing the 10x1" screw.** If desired, a drop of silicone may be used to seal the screw hole. Install the knobs using the 10x1" screws.
5. When covering the console, first fasten the snap to the screw stud, then extend the Stayput™ shock cord clips around the Stayput™ attach knobs.



Screw stud & snap (Figure 2)

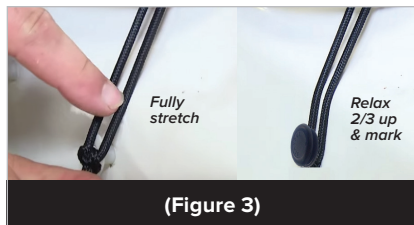

(Figure 3)



Ultimate shock cord clips / Stayput™ attach knobs

Carver by Covercraft Industries, LLC

212 N. Lyles Ave., Landrum, SC 29356

More Information at CarverCovers.com
or call (888) 48-COVER.

The Best Covers Under the Sun™