

Installation InstructionsFor Model 8WD1450/8WD1451

NOTE: Driver and Passenger Seats are Assembled

Items Provided:

2— 2" x 18" Hinges Used on Driver and Passenger Seat 16—#10 Stainless Steel Sheet Metal Screws





DIRECTIONS:

Mark the flat area on the bottom front edge of seat after placing them in the boat.

Secure the flat hinges on the bottom of the seat by drilling a 1/8" pilot hole for the screws.

Insert #10 screws with PHILLIPS HEAD SCREW DRIVER.

Place seats in boat and mark the holes from the hinge where they will be secured to the boat.

Drill 1/8" pilot holes making sure the area is clear of fuel tanks and electrical lines.

Secure hinges with #10 screws with PHILLIPS HEAD SCREW DRIVER.



Installation Instructions For Model 8WD1457


10" Center Step Pad

Tools needed: Power Drill and a Rubber Mallet

Items Provided:

2- XP5149 Wood Screws

2- XP3037-1 Cup Holders

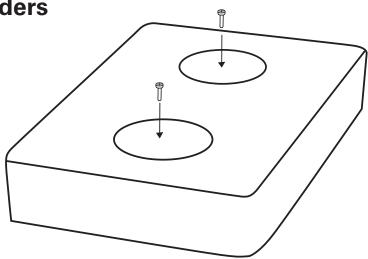

DIRECTIONS:

Remove the two Cup Holders.

Position the Step Pad in the boat in the desired location.


Drill 1/8" pilot holes in each of the cup holder locations.

Secure the Step Pad with the two Wood Screws using a PHILLIPS HEAD SCREW DRIVER.

Place the Cup Holders in the Step Pad using a Rubber Mallet to secure them in place.



8WD832 Quick-Release Seat Mount

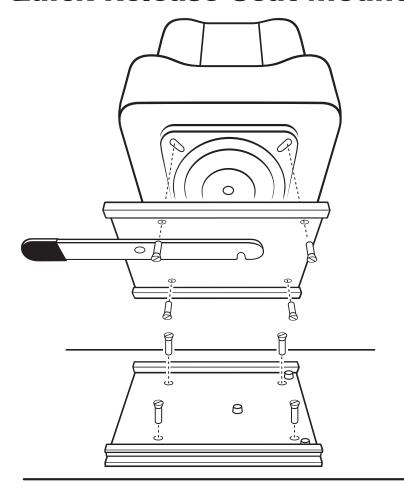

IMPORTANT: Quick-Release Seat Mount must be positioned so release lever is to the side of the boat.

- 1 Remove existing boat seat.
- 2 Slide Seat Mount apart.
- 3 Attach bottom plate to boat with four 1/4" flathead screws (not included). For pedestal mounting use four 1/4" flat head bolts, nuts and lock washers.
- 4 Attach top plate to swivel on boat seat.
- 5 Slide mounting plates back together. Lever will snap into space.

Questions? Missing Parts? Call 1.800.759.5769

Above items are not manufactured for commercial use.

WF 1126 03.12.2014

THE WISE COMPANY

MANUFACTURERS OF QUALITY MARINE SEATING SINCE 1960

472 WEST 9TH ST., RECTOR, AR 72461 • TOLL FREE TEL: 1.800.759.5769 • www.wiseseats.com